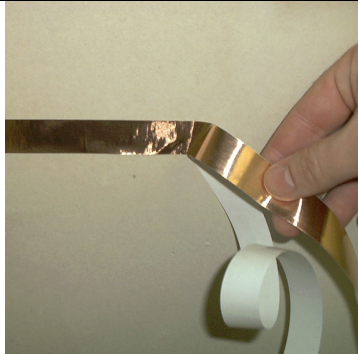


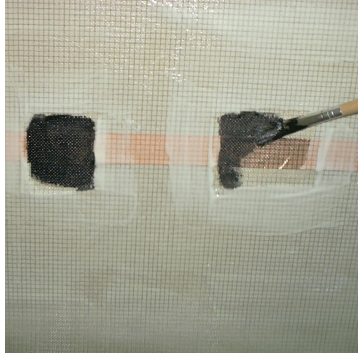


EMC-reinforcement-fabric Earthing connection

	<p>The earthing connection is shown with the application of paint as an example for all other applications. With any other application carry out the installation of the earth connection in a similar way.</p>
	<p>Prepare the subsoil, apply a self-adhesive copper tape, item no. 97406, and connect the tape to the grounding-/earthing-system. In addition to this guideline all valid national standards and regulations have to be observed.</p>
	<p>Apply paint/adhesive etc. on the wall. Keep areas with a dimension of 5 cm x 5 cm open. The distance between to areas is approx 25 cm, every area is located symetric to the copper tape.</p>
	<p>Apply the EMC-reinforce-ment-fabric to the wall, press well into the paint/adhesive. As far as the paint/adhesive gets dry quickly, apply the reinforcement-fabric sheet by sheet.</p>
	<p>Apply EMC-special-paste, item no 97410, at teh areas where no paint/adhesive has been applied. The fabrics shall be integrated in the EMC.spoecial-paste well. As far as needet apply the EMC-special-paste serveal times.</p>
	<p>After suitable time for drying apply the next layer of paint, paint over hte areas with EMC-special-paste too or continue your decoration in any other way.</p>